



## Dunker Duck Instructional Sheet

You MUST use a 12 volt or higher rechargeable, sealed battery

**Step 1** – After determining the depth of water you are hunting in, use a piece of ½ inch conduit and cut to desired length.

**Step 2** – Open back of Battery Box Decoy. Facing the tail of decoy, place battery inside with terminals facing right. Hook red and black wires to red and black terminals on battery. Do this before placing battery completely inside the decoy. After wires are connected, place battery completely inside the decoy and latch the lid.

**Step 3** – Insert pre-cut conduit into clamp on the bottom side of the decoy battery box and tighten the wingnut.

**Step 4** – Push conduit and battery box down to the surface of the water. **\*\*\*CAUTION\*\*\* BATTERY BOX DECOY DOES NOT FLOAT!** Leaving a inch or two above the waterline. This serves as your anchor for your system.

**Step 5** – Hook two (2) prong connector from battery box to the Dunker Duck motor box.

**Step 6** – Place Dunker Duck into water and turn on switch.

**ALWAYS make sure your battery is fully charged! Low battery may cause harm to your motor!**

Thank you, and have a safe and successful hunt!

Carl Ray Mager